



Vacuum System Maintenance

Sprayer System Maintenance

ITEM #	QUANTITY	ROTOVAC P/N	DESCRIPTION
1	1	RP-203A	VACUUM DISC
2	1	RA-106	COVER/SEAL ASSEMBLY
3	1	S-027	FELT SEAL
4	3	RA-113	SMOOTHGLIDE VACUUM SHOE ASSEMBLY-L.H.
5	3	RP-207A	GLIDE SHOE
6	1	RA-108	SPRAYER ASSEMBLY
7	1	A-2329AL	MALE SHAFT (LH)
8	1	RV-412	SMALL O-RING
9	1	S-023	O-RING
10	3	S-026	SPRAY JET
11	18	RV-401	ROUND HEAD SCREW
13	6	RV-402	FLAT HEAD SCREW
14	3	RP-224	GASKET RETAINER
15	3	RV-439	FLAT HEAD SCREW
16	1	RP-269	VENT CHECK (FROM S/N 1803)

Hard Surface Brush Head (RA-109A complete)