


Routine Maintenance

Removing the Cleaning Head

To familiarize yourself with the **360°** the first thing to learn is how to remove and replace the rotary cleaning head assembly for maintenance and cleaning. This is the single most important procedure of regular maintenance.

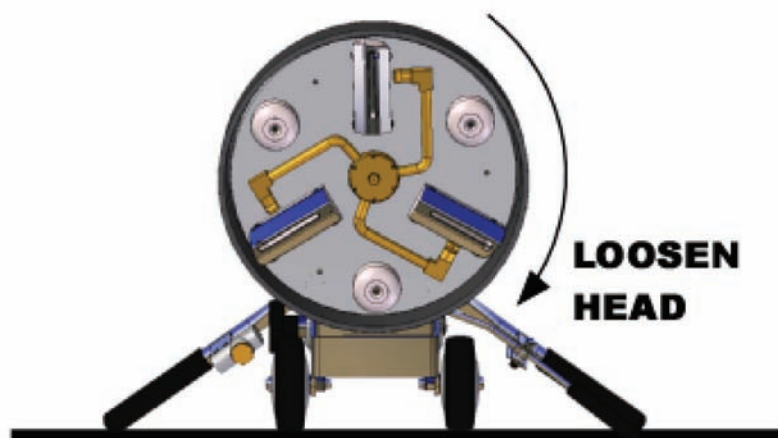

IMPORTANT!! Remove the cleaning head by unscrewing it in the same direction that it rotates during operation, which is clockwise from the bottom point of view. Tap on a vacuum shoe of the cleaning head with a rubber mallet or your foot to loosen the head. Now it will spin off for cleaning or adjustment.

Excessive force in the wrong direction may damage gears.

Note: Always assure that the vacuum is disabled and the felt seal remains seated in position on the 6 small studs when replacing the cleaning head.

Felt Vacuum Seals