


Check the felt vacuum seals on the vacuum head for damage or wear. **A good felt seal is important for maximum vacuum extraction performance.** An excessively worn or torn felt seal will result in more water left in the carpet than is desirable. The felt seal will perform better and last longer if treated with a non-oily silicone spray. We prefer Dupont Silicone/Teflon spray.

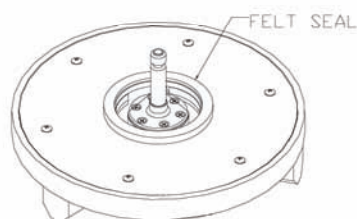

**Carpet and hard floor head
Felt Vacuum Seal**



**Optional 7" stair cleaning head
Felt Vacuum Seal**

Vacuum System Maintenance

To replace worn or damaged Vacuum Shoes, first remove the Head from the machine (see previous). The cover can then be removed by removing the 6 screws holding it in place. This allows access to the vacuum channels and ports for cleaning. It also allows access to the screws holding the vacuum shoes in place. If the shoes are being changed, remove the screws, and reattach new shoes. Tighten screws down securely. Assure that the seal retainers are returned to their original position. When reinstalling the cover assembly, **make sure that the vacuum channels in the cover/seal match up with the channels in the molded head**, and retighten. The Round Glide Discs are accessible from the underside without disassembly.

Sprayer System Maintenance

Periodically tilt the **360°** back and visually inspect the spray pattern of the jets to make sure they are not clogged or aimed in the wrong direction. The spray fan pattern should be aligned with the vacuum slots and should never go beyond the outer edge of the vacuum slot.

Carpet Cleaning Head (RA -105 complete)