



ROTOVAC

BONZER™

OPERATING INSTRUCTIONS


The Bonzer is primarily for cleaning commercial carpet with a truckmount. It may also perform well with more powerful portable extractors and on certain types of residential carpets. The Bonzer is shipped with holed glides on front and back along with a slotted glide in the owner's manual bag. If the Bonzer front end is lifting up off the carpet when you pull it, you may want to swap out the front holed glide with the slotted glide.

1. Make sure spray jets are spraying properly
2. The Bonzer is shipped with holed glides front and back along with a slotted glide that can be used on front or back as needed depending on carpet and other conditions. Remove white glide retainer on side of unit to replace holed glide with slotted glide.

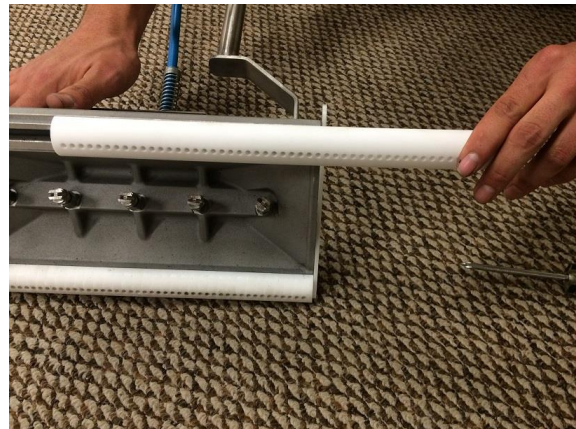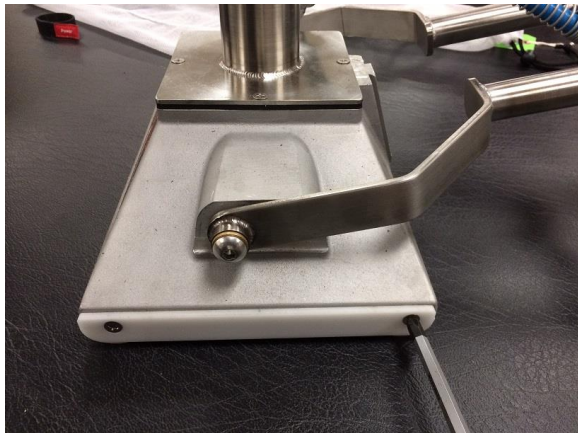

**Turn over for
page 2**

3. There is a screen filter located just above the male quick connect that must be cleaned periodically to ensure full flow

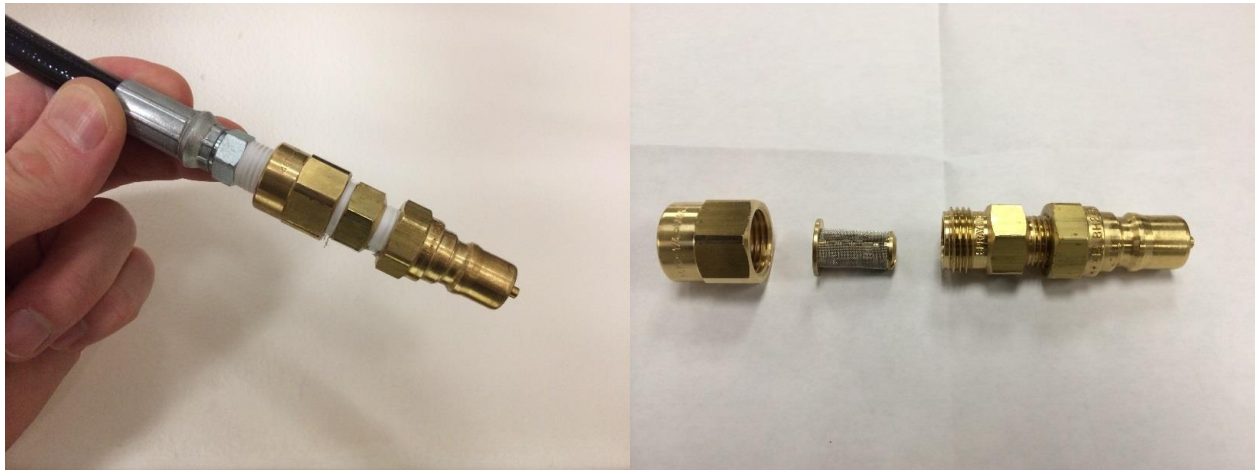

4. Pre-vacuum carpet to help prevent holed glides from clogging. Run vacuum hose across glide to quickly un-clog vacuum holes when needed
5. Optimum pressure is between 400-800 PSI. You can use up to 1200 PSI if needed.
6. Call Rotovac Toll Free 888-768-6822 with any problems or suggestions for improvements

Replacement Glides are available for only \$65 each

- Slotted Glide RP-050
- Holed Glide RP-060

Have a Bonzer day mate!