


# PUMP PRIMING GUIDE

## USING A MALE QUICK CONNECT

1. Make sure your extractor's solution tank has at least half a tank of water.
2. Use an open male quick connect and insert it into the female quick connect of your extractor.



3. Connect the vacuum hose and hold it over the open male quick connect.

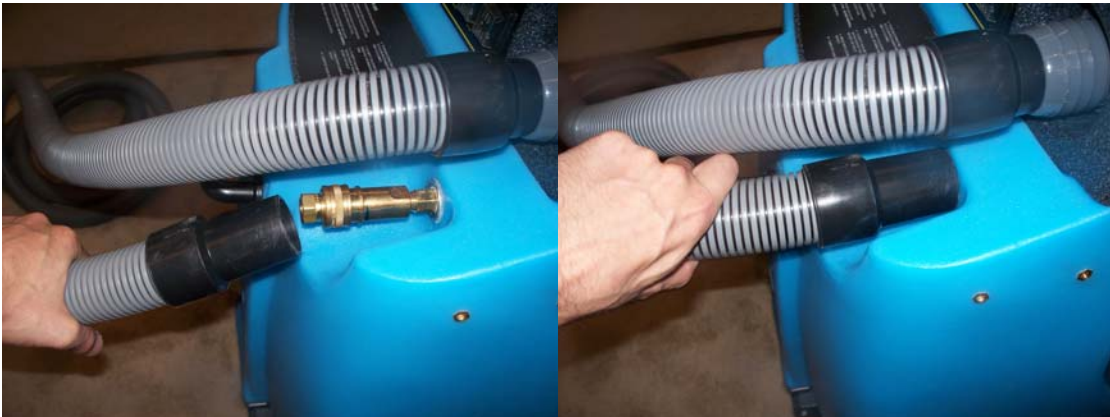

4. Turn on both vacuum motors and the pump. Allow them to run until water begins to flow through the open male quick connect.



## **USING A ROTOVAC 360 OR POWERWAND**

- 1. Take the cleaning head off of your 360, or one of the cleaning heads for your Power wand.**
- 2. Remove the vacuum hose from the view tube.**
- 3. Turn on both of the vacuum motors and the pump on your extractor.**



- 4. Hold the valve open on your 360 or Powerwand, it may be easier to use a rubber band.**



- 5. Hold the vacuum hose to the drive shaft of your 360 or Powerwand until water begins to flow.**



- 6. Turn off extractor and replace cleaning head, then continue cleaning.**